

# BEAM

## PotsDOCK Extreme Quick Start Guide

www.beamcommunications.com  
  
 PART #: USRQSG007303

BEAM Communications Pty Ltd

iridium



Support: support@beamcommunications.com  
 Info: info@beamcommunications.com  
 www.beamcommunications.com

Tel: +61 3 8588 4500  
 Fax: +61 3 9560 9055

Victoria, 3170, AUSTRALIA

BEAM Communications Pty Ltd

8 Anzed Court, Mulgrave

Extreme Alert Loop Button:

The loop needs to be OPEN (press button) for 2 seconds to activate Alert (SOS) mode.

Connect a Normally-CLOSED button, to the Brown and Green wires (it can be extended for longer runs).

Connect a Normally-OPEN button, to the Brown and Green wires (it can be extended for longer runs).

Allow up to 5 seconds for the call to be issued to the Iridium Extreme handset, at which point the progress message appears on the Iridium handset.


### Tracking & Alert

- Mount the handset cup to the mounting plate.
- Mount the space plate and the mounting bracket, by using the longer screws provided with the kit (Refer to the Iridium Extreme handset manual).
- Install the RAM arm-bracket behind these plates.
- Connect the Privacy Handset 3.5mm plug into the loom socket connector.
- Privacy Handset must be returned to cup when not in use.

### Privacy Handset:

- PotsDOCK Extreme USB Data Port:**  
The PotsDOCK Extreme has an integrated USB Data Port on the rear. Drivers for this USB port can be downloaded from:  
[www.beamcommunications.com/support](http://www.beamcommunications.com/support)
- PotsDOCK Extreme RJ11 Port:**  
Mount the analogue phone, and plug the RJ11 cable (up to 600m length) into the PotsDOCK Extreme RJ11 port.
- Pots/RJ11 Interface:**  
1. Mount the analogue phone, and plug the RJ11 cable (up to 600m length) into the PotsDOCK Extreme RJ11 port.  
2. Lift the RJ11 POTS phone handset "OFFHOOK" and listen for a dial tone.  
3. Dial (using the full country codes) on the RJ11 telephone keypad.  
4. Allow up to 5 seconds for the call to be issued to the Iridium Extreme handset, at which point the progress message appears on the Iridium handset.
- Extreme Handset:**  
Mount the handset cup to the mounting plate.


### Options

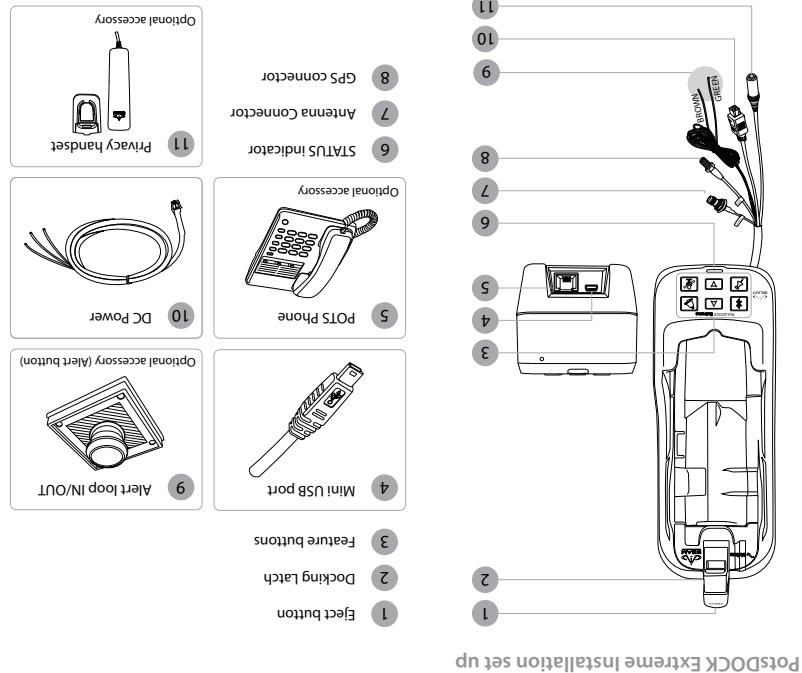


## Mounting Cradle

The PotsDOCK Extreme is supplied with a universal RAM® mount bracket that enables mounting to any flat surface (vertical or horizontal) within a vehicle, or other required location.


1. Attach one pivot base to the rear of the PotsDOCK Extreme using the M4 screws and washers supplied.

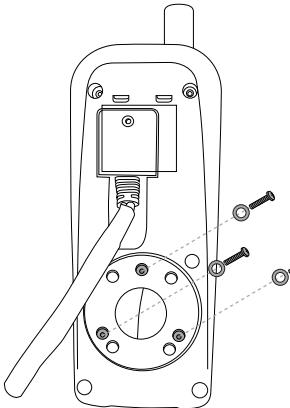

2. Secure the second pivot base to the location you have selected for mounting the PotsDOCK Extreme. (Screws not supplied)

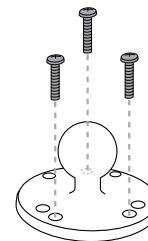


3. Use the interconnecting arm of the RAM® mount to secure the PotsDOCK Extreme to the pivot base and tighten into the desired location firmly using the wing nut on the arm.

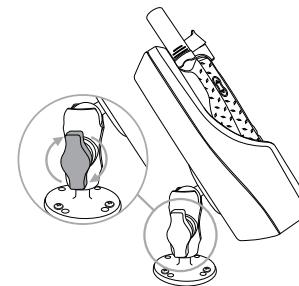


## Inserting and Ejecting Extreme Handset

### Inserting:


1. At the base of the Iridium Extreme handset there is an accessory connector cover. Open the cover and move it to the back of the handset, securing it to the two rear retaining features.

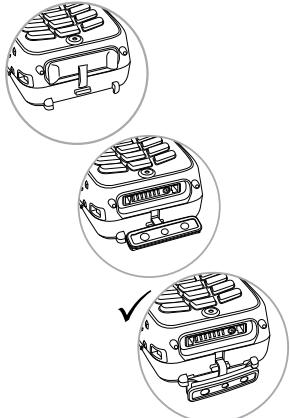

2. Press down the latch button and then gently rotate it up to open the latch. Place the Iridium Extreme handset into the PotsDOCK Extreme.

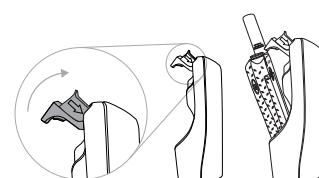


3. Lift the latch back over the handset until it Click's into place.

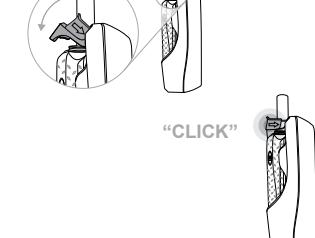

### Removing:

1. To remove the handset, first press the eject button and then rotate the latch up away from the handset. The handset can now be slid up and out of the PotsDOCK. Refit the accessory connector cover to maintain the IP rating of the Iridium Extreme handset.

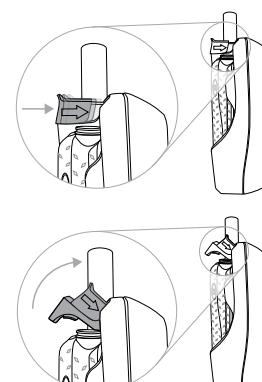

## Iridium Antenna Connection

The antenna connections exit from the rear of the PotsDOCK Extreme cradle, via the antenna loom. There are two RF connections required, the Satellite TNC Female Connector and GPS SMA Female connector. Refer to the antennas installation guide for antenna mounting and location requirements.



### WARNING

**DO NOT pull with force on the cables from the rear of the PotsDOCK. Please install strain relief clamping for the antenna cables where required.**

**Correct installation of the antenna system is a vital part of the PotsDOCK system, to ensure reliable functionality, and drop-free calls.**

## PotsDOCK Extreme Front Panel

LOCATION	BUTTON MODE	ACTION	LED/SOUND
	Mute press On/off	<b>In a Call:</b> Mute the microphone (uplink) on the Bluetooth Handfree or optional privacy handset. <b>Out of Call or Incoming Ring:</b> Increase/decrease volume of incoming ring tone on the internal speaker. (The lowest setting will silence the Ringer).	LED turns RED Muted LED turns OFF Not muted
 OR 	Up/Down	<b>In a Call:</b> Increase/decrease volume on the audio device in use. <b>Out of Call or Incoming Ring:</b> Increase/decrease volume of incoming ring tone on the internal speaker. (The lowest setting will silence the Ringer). <b>Brightness Mode:</b> Increase/decrease the LED intensity.	Audio will sound louder/quieter with each press. A beep will sound indicating the increased/ decreased ring tone volume of the internal speaker All Button LEDs will be increased/decreased with each press.
 +	Brightness - dual button simultaneous press (2 sec)	<b>Out of Call:</b> Enter LED brightness change mode. Then Press UP and/or DOWN arrows to vary intensity.	Status LED flashes YELLOW 3 times and all Button LED's will change WHITE. A single beep will sound when entering brightness change mode.
		Mode will automatically exit after 5 seconds after the last button press.	A short double beep will sound when exiting change mode.
	Ringer Single Press	<b>Not in Call:</b> Cycle through the ring tones for the internal buzzer. The last Ringer type sounded is then saved.	Ring tone playback and the output device changes. LED FLASHING (Fast) BLUE when Ring Tone is sounded.
	Single Press (no beep sound)	<b>When Bluetooth is OFF:</b> Turns ON Bluetooth function.  <b>If Bluetooth connected but NOT used in Call:</b> Transfer the audio to the Bluetooth device.	LED changes from OFF to FAST FLASHING in BLUE when searching Bluetooth device(s). LED turns solid BLUE when connected LED changes from Solid BLUE to SLOW FLASHING in BLUE
	Single Press 1.5 sec (until 1 beep sounds)	<b>Bluetooth function is ON:</b> Turns OFF Bluetooth function	LED turns OFF
	Single Press 5 sec (until 2 beep sounds)	<b>Bluetooth function is ON:</b> Bluetooth is set to discovery mode for pairing to Bluetooth devices	LED is FAST FLASHING ORANGE and BLUE, and then turns solid BLUE when paired and connected.
	Single Press 10 sec (until 3 beep sound)	<b>Bluetooth is ON or OFF:</b> Clear all paired Bluetooth devices and turn off Bluetooth function	LED turns OFF
	Single Press (until 1 beep sounds)	<b>In Tracking Mode*:</b> Send a tracking message to the pre-configured destination in the Extreme Handset	LED flashes GREEN for 5 seconds. A beep will sound to indicate that a tracking message is to be sent#
	Single Press 5 sec (until 2 beeps sound)	Enables / Disables Track button	LED Solid GREEN is enabled, LED OFF is disabled

\* This action is optional, and only when tracking for your Extreme Handset is configured and activated. Using the Track button only initiates the command to send a Quick GPS message - check that the Extreme Handset is configured correctly.

# A beep will only sound if audible alerts are enabled in Eagle