



[Portal](#) > [Knowledgebase](#) > [Inmarsat](#) > [IsatPhone Pro](#) > [How-To](#) > [Checking prepaid balance on IsatPhone Pro & IsatPhone 2](#)

Checking prepaid balance on IsatPhone Pro & IsatPhone 2

Lu Parente - 2017-03-28 - in [How-To](#)

Follow the steps below on how to check your prepaid balance from the IsatPhone Pro & IsatPhone 2.

Note: The prepaid balance is displayed in units. To convert the units to minutes, please see the Roadpost product page:

Canadian customer rates: <http://www.roadpost.ca/IsatPhone-Pro-Prepaid-Cards-P616C328.aspx>

USA customer rates: <http://www.roadpost.com/IsatPhone-Pro-Prepaid-Cards-P748C426.aspx>

Solution: Check Pre-paid Balance

1. Press Menu
2. Highlight Settings, and press Select
3. Highlight Prepay, and press Select
4. Highlight Balance Enquiry, and press Select

Alternative methods for checking the balance:

- To check your airtime balance, dial 591 from your Inmarsat handheld phone or +870 77 200 0591 from any other phone. Ensure to have your satellite phone number ready.
- On Inmarsat IsatPhone Pro you can also just press *106# while connected to the network to have your airtime balance displayed as text on your Isatphone Pro.