



Portal > Knowledgebase > GeoPro > GeoPro Messenger > How-To > Clearing device memory on GeoPro Messenger

Clearing device memory on GeoPro Messenger

Lu Parente - 2014-05-14 - in How-To

Follow the steps below on how to clear the device memory on the GeoPro Messenger GPM1000.

Note: The GPM1000 has a limited amount of on-board memory. When the device message & waypoint memory become full the device will automatically cycle and purge the oldest the message on the device. The clear memory functions on the device are used to manually clear the device of any messages, waypoints & GPS data.

Solution: Clearing the device memory

1. Press the "Menu" softkey from the Home screen.
2. Scroll to "Unit Settings" and press the "Select" softkey.
3. Scroll to "Clear Memory" and press the "Select" softkey.
4. Scroll to the desired memory type you would like to clear.
 - Clear All
 - Clear Drafts
 - Clear Inbox
 - Clear Outbox
 - Clear Sent
 - Clear Waypoints
 - Clear GPS
5. Press the "Select" softkey on the chosen memory type.
6. A confirmation message will appear, "Are you sure you want to clear all items?" press the "Yes" softkey to confirm.
7. Once the memory has been cleared you can return to the Home screen.